

AP-10

Part No. PLUG: 3531-0001-00T 3539-0001-45T RECEPTACLE:3532-0001-00T

Instruction Manual

0	S22382	August 30, 2022	K.Tanaka	-	Y.Hashimoto
Rev.	ECN	Date	Prepared by	Checked by	Approved by
Confidential C		I-PEX Inc.		QKE-DFFDE09-03 REV.8	

-


This manual outlines precautions for proper handling of I-PEX AP-10 power terminal.

[Part name and part number]

Product name AP-10 PLUG

Product No.

	Part No.	
PLUG Height	h=7.5mm	h=14.5mm
Sn Plating	3531-0001-00T	3539-0001-45T

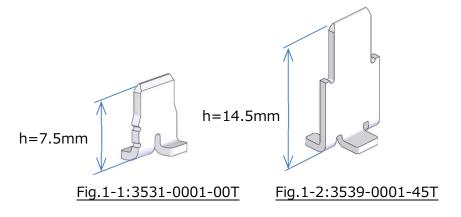


Product name AP-10 RECEPTACLE

	Part No.
Sn Plating	3532-0001-00T



[Mating condition]

PLUG Height h=7.5mm		h=14.5mm	
PLUG	3531-0001-00T	3539-0001-45T	
RECEPTACLE 3532-0001-00T		3532-0001-00T	

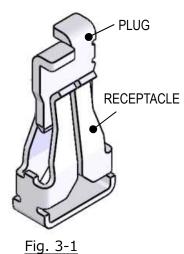

PLUG: 3531-0001-00T RECEPTACLE: 3532-0001-00T

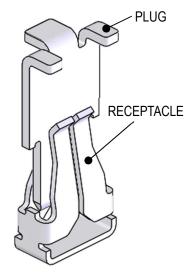


Fig. 3-2 PLUG: 3539-0001-45T RECEPTACLE: 3532-0001-00T

[Precaution for PLUG insertion]

- 1. Insertion procedure
- 2. Misalignment
- 3. Definition of misalignment in X-axis direction
- 4. Mating height
- 1. Insertion procedure

Place the plug to the receptacle guide as Fig.4. In the aligning, control the misalignment between RECEPTACLE and PLUG centers to be within the our guaranteed misalignment range.


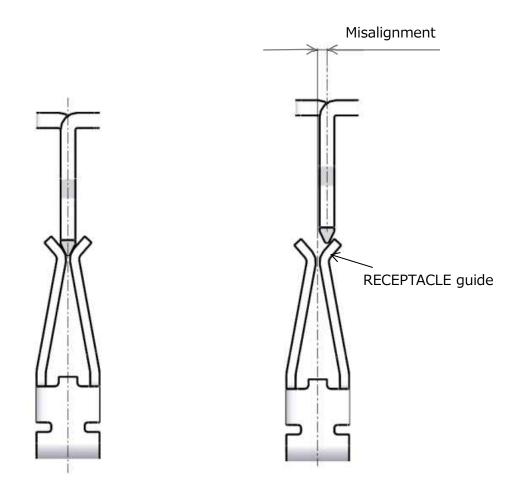


Fig. 4 Insertion procedure


2. Misalignment

2-1. About the X, Y, and Z directions

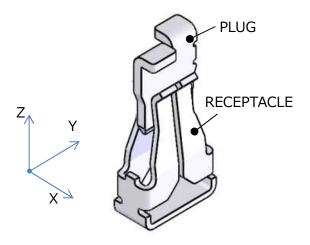


2-2. Misalignment allowance in Y-axis direction

The misalignment in Y-axis direction should be within the range where the RECEPTACLE spring ends do not extend beyond the both ends of the PLUG area.

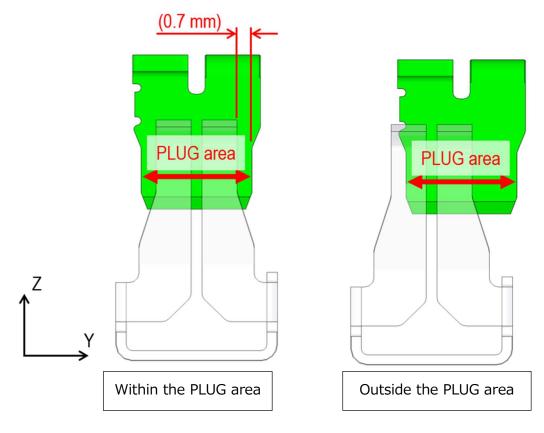

2-3. Misalignment allowance in X direction

- 1) Misalignment at the initial insertion is 0.55mm. Control the insertion misalignment between initial insertion position and re-insertion position to be within 0.45mm. (See Fig.5, re-insertion condition.) The misalignment allowance in X direction has been set considering the production tolerance.
- 2) Connection other than the contact position is out of our warranty when mating Plug and Receptacle connector.

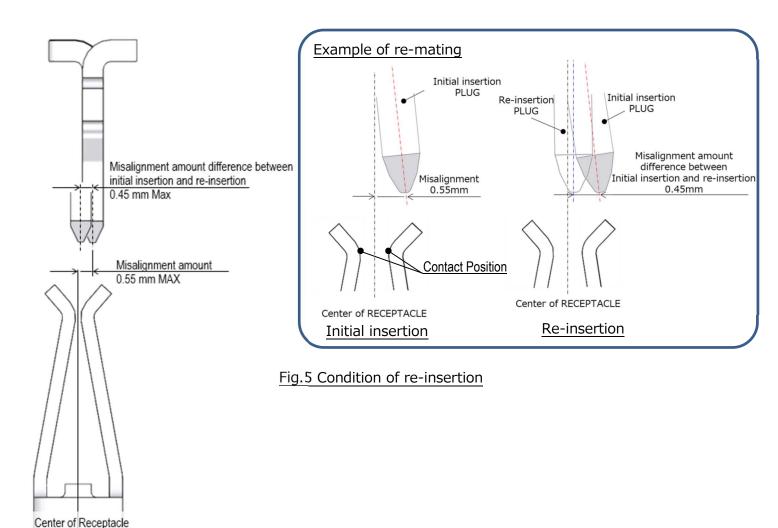

3. Definition of misalignment in X-axis direction

The amount of axis deviation is the sum of the offset amount X [mm] and the deviation components [A], [B], and [C] in the x-axis direction.


Misalignment: X + [A] + [B] + [C][E.g.] $X + [A] + [B] + [C] = 0.4 \text{ mm} + 0.1 \text{ mm} + 0.02 \text{ mm} + 0.05 \text{ mm} = 0.57 \text{ mm} \rightarrow \text{NG}$ $X + [A] + [B] + [C] = 0.35 \text{ mm} + 0.12 \text{ mm} + 0.02 \text{ mm} + 0.03 \text{ mm} = 0.52 \text{ mm} \rightarrow \text{OK}$

The misalignment components [A], [B], and [C] are defined below. (See Fig. 6)

[A] : Displacement amount of the contact point in axis x direction caused by PLUG rotation angle $\theta \cdots 1.90$ mm (RECEPTACLE spring area)*tan θ

[B] : Amount of displacement that increases in the x-axis direction of the contact part when Y is offset in the y-axis direction with PLUG rotated by $\theta \cdots Y^* \tan \theta$


[C] : Displacement amount of point W in x axis direction with the plug leaning $\cdot \cdot \cdot (AP-10 \text{ PLUG height})*\sin\Phi$ (θ [deg] : PLUG rotation angle, Y [mm] : Misalignment in axis y direction, Φ [deg] : PLUG leaning angle)

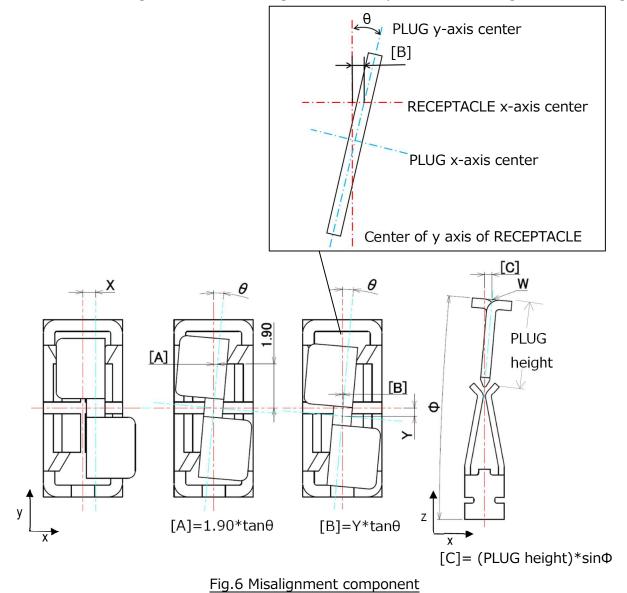

I-PEX

4. Mating height

Insert PLUG vertically and use the mating height within the range shown in Fig.7.

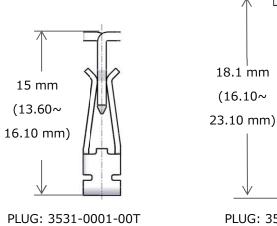

PLUG: 3531-0001-00T RECEPTACLE: 3532-0001-00T

PLUG: 3539-0001-45T RECEPTACLE: 3532-0001-00T

Fig.7 Mating height